

HD TopPlate for 5B TUR0009

Kit Includes:

1pc 5B HD TopPlate



4pcs M5x16 FlatHeads

2pcs M5x20 FlatHeads



This product fits 5B only


1. Remove cage, body panels and battery box.
2. Remove 8 screws holding stock top plate. Save the 2pcs M5x20 Socketheads as you will need them for install.

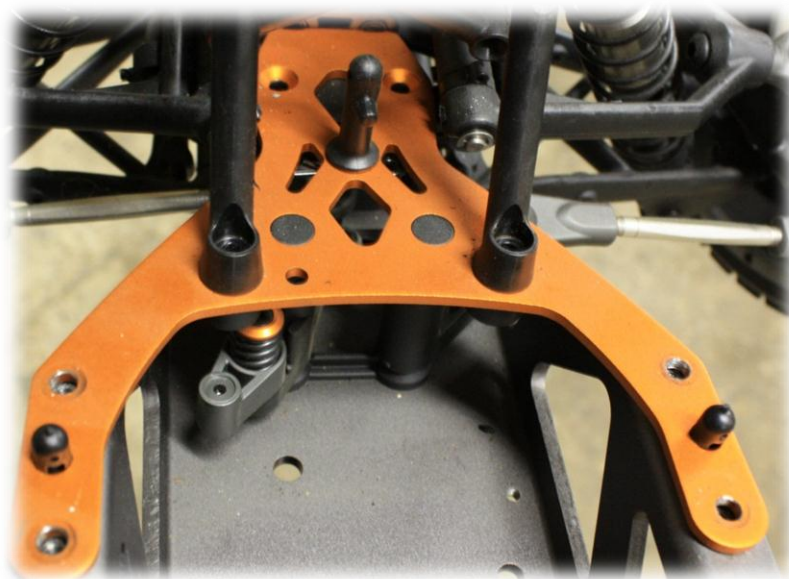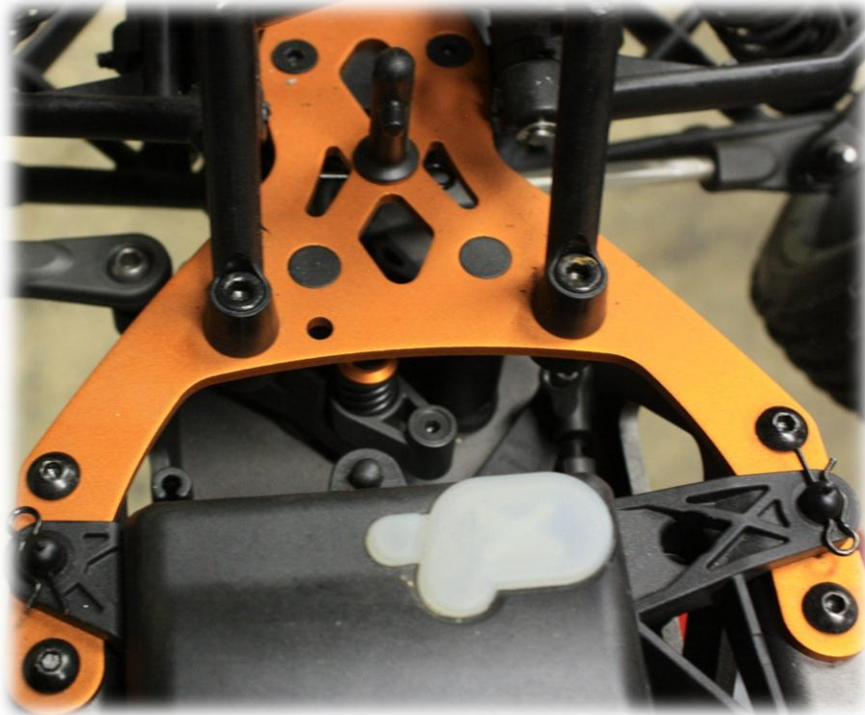


3. Remove stock top plate, this will require pulling uprights up and towards front of vehicle and it will require some twisting and force.
4. Remove Body post and battery box pins and install on TR TopPlate.




5. Install TR TopPlate, this will require pulling the uprights up and towards the front of vehicle. It will also require some force, twisting and finesse. Make sure steering post mounts sit properly in TR TopPlate, when installed properly TR TopPlate will sit flat against the frame and front BulkHead.

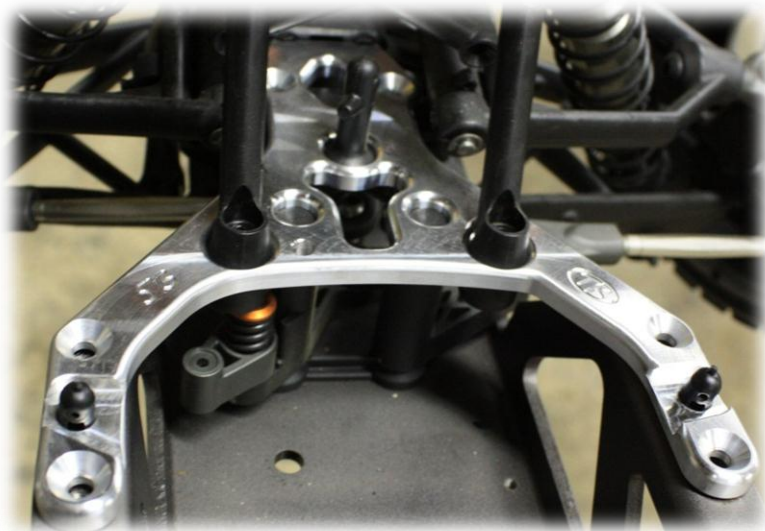

6. Install but do not tighten 4pcs M5x16 FlatHeads into holes near the battery box and install 2pcs M5x 20 FlatHeads into holes towards front of vehicle. Now you may tighten them.
7. Install 2pcs M5x20 SocketHeads that you saved from step2 into uprights and tighten.

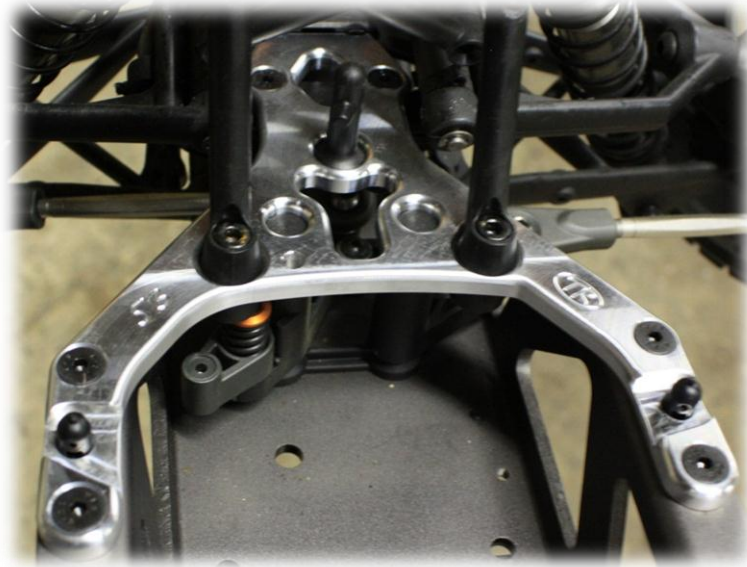

8. Install Battery Box and clips. Battery box will fit tight and require some force, this helps hold battery box in position and reduces flexing. If it is too tight, remove very small amounts of plastic from the radio box tabs and check fitment frequently.

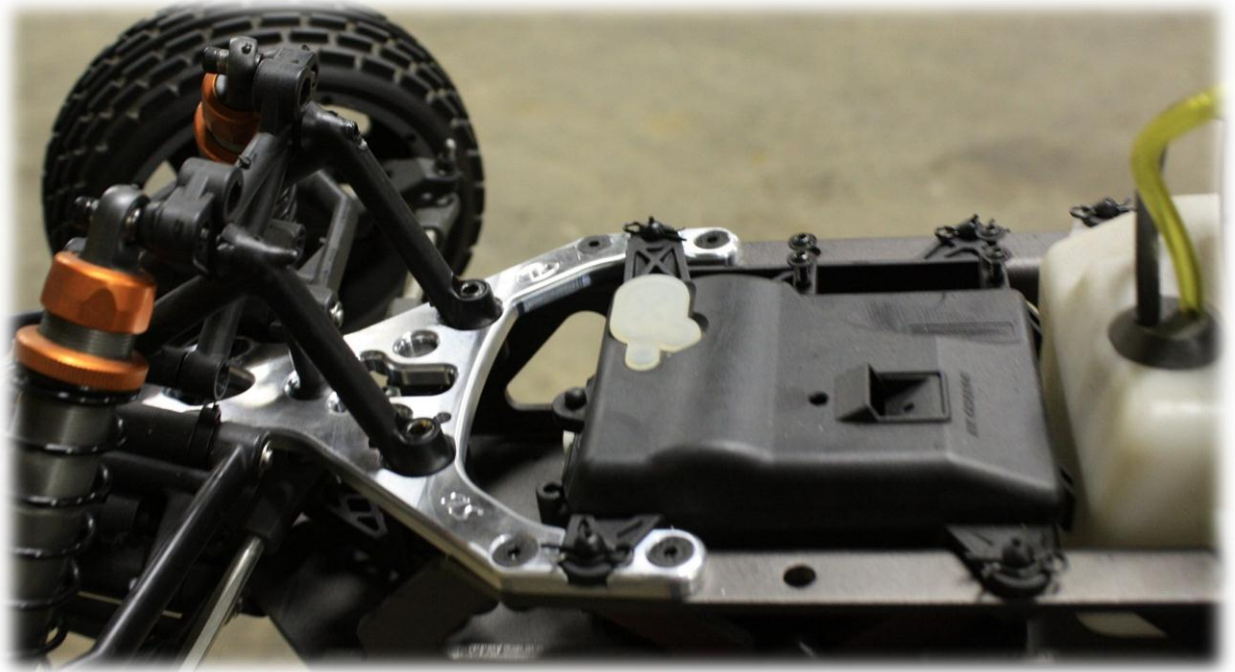

9. Reinstall cage and body panels.