

## Turtle Racing 5B Front HD Combo Mount TUR0007

Kit includes:

1pc TR HD Combo Mount

2pcs M4x35 FlatHeads

2pcs M4x30 ButtonHeads

2pcs M4 Lock nuts



This product fits 5B only

1. Remove 2 screws on shock tower, 2 screws holding top of shocks and 2 screws on bottom of shock tower/backside and remove stock tower.



2. Squeeze Combo mount between shock uprights.


3. Position combo on lower bosses of shock uprights, push combo into position on top bosses.



Combo will be against top and bottom of uprights when installed correctly.



4. Install 2pcs M4x35 Flathead in shock tower. These screws are longer than stock and will go through the plastic shock tower. Either drill through shock tower with a 1/8" (3mm) drill or just drive the screw through the plastic. After you drive screw through, back it out and trim plastic flat with a knife or Dremel, run screws back in and install M4 locknuts.

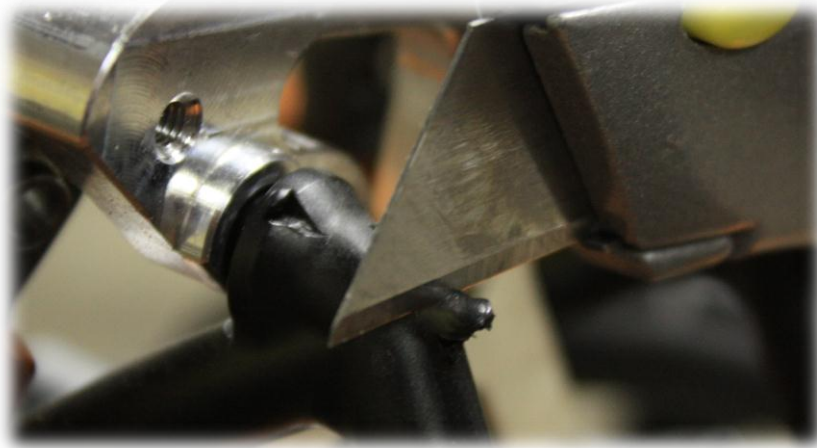

5. Reinstall the 2 stock (wood style) screws into lower combo mount (backside).





6. Insert shocks into mount, install and tighten M4x30 ButtonHead.



